 


User Guide

 
XLayer Powerbank Plus Outdoor 10.050

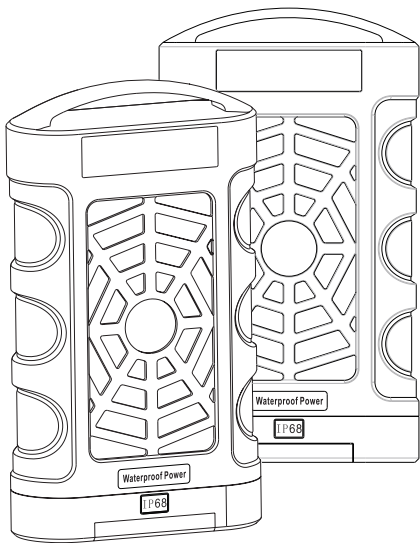

Thank you for purchasing the XLayer Powerbank Plus Outdoor 10.050 mAh. This powerbank can be widely used for all kinds of electronic devices such as iPhone, iPad or other smartphones.

Contents


1 Powerbank, 1 USB to Micro-USB cable, 1 Screwed charging adapter, 1 Ssnaphook, 1 User Guide

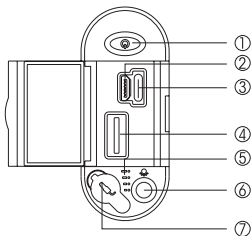

- (1) Power On/Off Button
- (2) Micro-USB Input
- (3) Lightning Input
- (4) USB Output
- (5) LED indicator
- (6) Flashlight
- (7) Screwed charging adapter

LED Indicator

 Press the Power On/Off Button to check the remaining capacity.

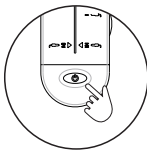

○ Battery capacity is low,
○ less than 25% remaining.

● Battery capacity is good,
● less than 75% remaining.

○ Battery capacity is middle,
● less than 50% remaining.


● Battery capacity is sufficient,
● more than 75% remaining.

Product Specification

Battery type:	Lithium Ion
Capacity:	36.2 Wh (3.6V/10.050 mAh)
Micro-USB Input:	5V/2.0A
Lightning-Input:	5V/2.0A
USB Output:	5V/2.1A
Size:	120 x 68 x 28 mm
Weight:	245 g

Compatibility

 
The powerbank is compatible with all smartphones, tablets and other USB powered devices with 5V charging input. To charge your devices with the powerbank, plug this charging cable into the USB output. The supplied cable is able to charge all mobile devices which have a Micro-USB input. For other devices, please use the cable supplied by manufacturer. Pull the cable from the mobile device after finishing charging. The powerbank would automatically shut off after a few seconds.

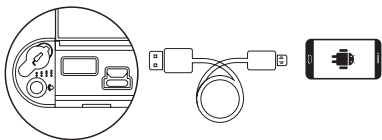

How to charge the powerbank


We suggest that you fully charging the powerbank before each use. To charge your powerbank, use one of the following 2 charging options.

 1. Charge with a power adapter with USB:



Connect the powerbank to power adapter USB port with the supplied USB to Micro-USB cable directly. You can also charge the powerbank with a USB to Lightning cable.

 2. Charge with a free USB port on your computer:



Connect the powerbank to a free USB port on a computer with the supplied USB to Micro-USB cable directly.

Safety Notice

- Fully charge the powerbank once before first use.
- Use the included cable to charge the powerbank.
- In order to ensure the durability of the battery during irregular use, charge the powerbank once every three months.
- Charging by unsupervised, short circuit or mechanical damage would cause overheating and fire.
- Do not immerse the product in water or other liquids.
- Handle the product carefully. Shocks, vibrations or fall from a low height can damage the product.
- If liquid is leaking, stop using the device.
- A remodeling or modification of the product would affect the safety.
Risk of injury!

- Don't open the appliance without proper authorization and don't perform repairs yourself!
- Please keep the product away from children.
- Modifications and mistakes reserved.



This electrical device does not belong in the garbage. For proper disposal, please contact the public collection in your community.

Please note: we don't accept liability for any damages on connected devices. Please check compatibility of our product with the manufacturer of your device before use.

Gaudio herewith explains that the device XLayer **Powerbank Outdoor 10.050 mAh** is in accordance with all relevant requirements and guidelines. The declaration of conformity can be found under the following address or simply contact us under service@xlayer.de. www.gaudio.de/ke/214417.pdf