

LED Indicator

- Powerbank battery is low,
○ less than 25% remaining.
- Powerbank battery is high,
● less than 75% remaining.
- Powerbank battery is middle,
● less than 50% remaining.
- Powerbank battery is very high,
● more than 75% remaining.

Product Specification

Highly efficient solar panel:	5 V / bis zu 250 mAh
Battery type:	Lithium Polymer
Capacity:	37 Wh (3.7 V / 10.000 mAh)
Wireless output:	5 W
USB output:	5 V / 2.1 A
Micro-USB input:	5 V / 2.1 A
Type C input:	5 V / 2.1 A
Power Display:	4 LED indicators show power level
Size:	150 x 77 x 22 mm
Weight:	265 g

Compatibility

The Powerbank is compatible with all inductive-enabled smartphones, tablets and other USB powered devices with 5 V charging input.

The powerbank will automatically shut off a few seconds after finishing charging.

Cancel the connection from the mobile device after finishing charging.

How to charge the powerbank

We recommend that you fully charge the powerbank before each use. To charge the powerbank, please follow the instructions below.

1. Charging the Powerbank with the solar panel
Simply place the powerbank in the sunlight, the powerbank charges itself on its own. The solar LED will light green.
2. Charging the powerbank via USB-C or Micro-USB cable
Connect the powerbank with your laptop or computer, using the supplied Micro-USB cable. Or connect the powerbank with a USB- to Type C cable (not included), with your laptop or computer.
3. After charging is finished, charging please disconnect the USB cable from the powerbank.

How to charge other devices

Charging an inductive-enabled device on the powerbank

1. Put the wireless charging device in the middle of the wireless charging output of the powerbank.
2. When connected correctly, the device will automatically start charging and the wireless indicator will light blue.
3. After charging is finished, please disconnect the device by taking it from the powerbank.

Charging with a cable

1. Connect your device to be charged to the USB output of the Powerbank with the compatible cable.
2. When connected correctly, the device will automatically start charging and the LED indicators will turn on particular battery level.
3. After charging is finished, charging please disconnect the device and unplug the USB cable from the powerbank.

How to use the LED flashlight

1. Turn on the powerbank by pressing the power button.
2. Hold down the power button for about 3 seconds.
3. Switch off the flashlight by pressing the power button again for about 3 seconds.

Safety Notice

- Fully charge the powerbank once before first use.
- Use the included cable to charge the powerbank.
- In order to ensure the durability of the battery during irregular use, charge the powerbank once every three months.
- Charging by unsupervised, short circuit or mechanical damage would cause overheating and fire.
- Do not immerse the product in water or other liquids.
- Handle the product carefully. shocks, vibrations or fall from a low height can damage the product.
- If liquid is leaking, stop using the device.
- A remodeling or modification of the product would affect the safety.
Risk of injury!
- Do not open the device without proper authorization and do not perform repairs yourself.
- Please keep the product away from children.
- Modifications and mistakes reserved.



This electrical device does not belong in the garbage. For proper disposal, please contact the public collection in your community.

Please note: we don't accept liability for any damages on connected devices. Please check compatibility of our product with the manufacturer of your device before use.

XLayer GmbH herewith explains that the device XLayer **Powerbank PLUS Solar Wireless 10.000 mAh** is in accordance with all relevant requirements and guidelines. The declaration of conformity can be requested under service@xlayer.de.