

- Tauchen Sie das Produkt niemals in Wasser oder andere Flüssigkeiten.
- Behandeln Sie das Produkt sorgfältig. Schläge, Erschütterungen oder Fallen aus bereits geringer Höhe können das Produkt beschädigen.
- Bei Austritt von Flüssigkeiten, verwenden Sie das Gerät auf keinen Fall weiter.
- Ein Umbau oder Verändern des Produktes beeinträchtigt die Produktsicherheit. Achtung Verletzungsgefahr!
- Öffnen Sie das Gerät niemals eigenmächtig. Führen Sie Reparaturen nie selbst aus!
- Bitte halten Sie das Gerät von Kindern fern.
- Technische Änderungen und Irrtümer vorbehalten.




Dieses Elektrogerät gehört nicht in den Hausmüll. Für die fachgerechte Entsorgung wenden Sie sich bitte an die öffentlichen Sammelstellen in Ihrer Gemeinde.

Für Schäden an angeschlossenen Geräten wird keine Haftung übernommen. Informieren Sie sich unbedingt vor dem Gebrauch beim Hersteller Ihres Gerätes über die Verwendbarkeit dieses Zubehörproduktes.

Hiermit erklärt Gaudio, dass sich das Gerät XLayer **Powerbank Wireless Discover 10.000 mAh** in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der erforderlichen Richtlinien befindet. Die entsprechende Konformitätserklärung kann unter folgender Adresse gefunden oder unter service@xlayer.de angefordert werden. www.gaudio.de/ke/215756-215782.pdf

User Guide


XLayer Powerbank Wireless Discover 10.000

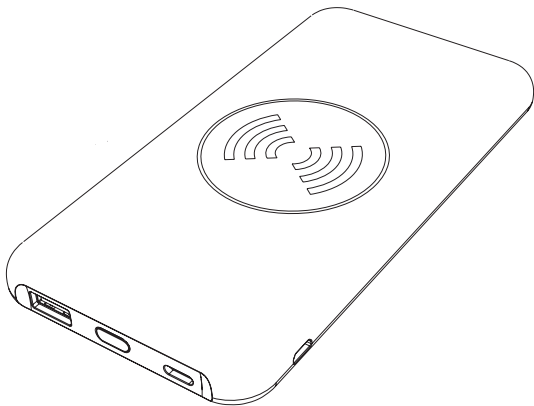

Thank you for purchasing the XLayer Powerbank Wireless Discover 10.000 mAh. This powerbank can be widely used for all kinds of electronic devices such as iPhone, iPad or other smartphones.

Contents

1 Powerbank, 1 USB to Micro-USB Cable, 1 User Guide

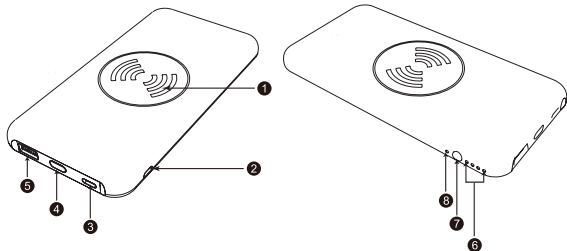

(1) Wireless charging output

(2) Micro-USB Input

(3) Lightning Input

(4) LED Flashlight

(5) USB Output

(6) LED indicator

(7) Power On/Off button

(8) Wireless indicator

LED Indicator

○ Powerbank battery is low,
○
○
● less than 25% remaining.

○ Powerbank battery is high,
●
● less than 75% remaining.

○ Powerbank battery is middle,
○
● less than 50% remaining.

● Powerbank battery is very high,
●
● more than 75% remaining.

Product Specification

Battery type:	Lithium Polymer
Capacity:	37 Wh (3.7V/10.000 mAh)
Micro-USB Input:	5V/2.0A
Type C Input:	5V/2.0A
USB Output:	5V/2.0A
Wireless Output:	5V/1.5A
Wireless charging distance:	0-8 mm
Power Display:	4 LED indicators show power level
Size:	155 x 79 x 14 mm
Weight:	234 g

Compatibility

The Powerbank is compatible with all inductive-enabled smartphones, tablets and other USB powered devices with 5V charging input.

The powerbank will automatically shut off a few seconds after finishing charging.

Cancel the connection from the mobile device after finishing charging.

How to charge the powerbank

We recommend that you fully charge the powerbank before each use. To charge your powerbank use one of the following two charging options:

1. Connect the powerbank with the supplied USB to Micro-USB cable or your Lightning cable to a PC USB port or AC power adapter.
When connected correctly, the powerbank will automatically start charging.
2. When charging, four LED indicators will show the corresponding capacity being charged. When fully charged, the indicators will all light up and stop blinking.
3. After finished charging please disconnect the USB cable from the powerbank.

How to charge other devices

Charging a inductive-enabled device on the powerbank

1. Put the wireless charging device in the middle of the wireless charging output of the powerbank.
2. When connected correctly, the device will automatically start charging and the wireless indicator will light blue.
3. After finished charging please disconnect the device by taking it from the powerbank.

Charging with a cable

1. Connect the powerbank and the device with the USB to Micro-USB cable.
2. When connectet correctly the device will automatically start charging and the LED indicators will turn on particular battery level.
3. After finished charging please disconnect the device and unplug the USB cable from the powerbank.

4. These smartphones support wireless charging:

iPhone 8, 8 Plus, iPhone X

Galaxy Note 8, Galaxy S7, S7 Edge, Galaxy S6, S6 Edge, Galaxy S8,
Galaxy S8 Plus

Nexus 4, Nexus 5, Nexus 6

Nokia Lumia 920, 1020, 928, Lumia 950, 950 XL

LG G3, G5, G6, G6+, etc

How to use the LED flashlight

1. Turn on the powerbank by pressing the power button.
2. Turn on the LED flashlight by pressing the power button twice.
3. Turn off the LED flashlight by pressing the power button again twice.

Safety Notice

- Fully charge the powerbank once before first use.
- Use the included cable to charge the powerbank.
- In order to ensure the durability of the battery during irregular use, charge the powerbank once every three months.
- Charging by unsupervised, short circuit or mechanical damage would cause overheating and fire.

- Do not immerse the product in water or other liquids.
- Handle the product carefully. shocks, vibrations or fall from a low height can damage the product.
- If liquid is leaking, stop using the device.
- A remodeling or modification of the product would affect the safety.
Risk of injury!
- Don't open the appliance without proper authorization and don't perform repairs yourself!
- Please keep the product away from children.
- Modifications and mistakes reserved.



This Electrical device does not belong in the garbage. For proper disposal, please contact the public collection in your community.

Please note: we don't accept liability for any damages on connected devices. Please check compatibility of our product with the manufacturer of your device before use.

Gaudio herewith explains that the device XLayer **Powerbank Wireless Discover 10.000 mAh** is in accordance with all relevant requirements and guidelines. The declaration of conformity can be found under the following address or simply contact us under service@xlayer.de.
www.gaudio.de/ke/215756-215782.pdf