

So laden Sie die Powerbank auf

Wir empfehlen die Powerbank vor jeder Nutzung komplett aufzuladen. Um Ihre Powerbank zu laden, beachten Sie bitte folgende Anleitung.

1. Schließen Sie die Powerbank mit dem beigelegten Micro-USB Kabel oder mit einem Lightning Kabel an Ihren Laptop oder Computer an. Alternativ können Sie die Powerbank auch über ein Netzteil an einer freien Steckdose laden. Benutzen Sie dazu ebenfalls das beigelegte Micro-USB Kabel oder ein Lightning Kabel.
2. Vier Ladestandsindikatoren kennzeichnen den aktuellen Ladefortschritt. Sobald **alle vier Indikatoren leuchten**, ohne zu blinken, ist die Powerbank vollständig aufgeladen.
3. Nach erfolgreichem Ladevorgang bitte die Powerbank von der Stromversorgung trennen.

So laden Sie externe Geräte

Laden eines induktiven Gerätes auf der Powerbank

1. Legen Sie Ihr induktives Gerät auf die induktive Ladefläche.
2. Der Ladevorgang wird automatisch eingeleitet und der **blaue** Ladestandsindikator der Powerbank wird aufleuchten.
3. Um den Ladevorgang zu unterbinden einfach das aufzuladende Gerät von der Powerbank abnehmen.

Laden mit einem Kabel

1. Verbinden Sie Ihr aufzuladendes Gerät mithilfe des beigelegten Micro-USB Kabels mit dem USB-Ausgang der Powerbank.
2. Der Ladevorgang wird automatisch eingeleitet und der **grüne** Ladestandsindikator wird aufleuchten.
3. Um den Ladevorgang zu unterbinden einfach die Verbindung beider Geräte trennen indem Sie das Ladekabel ausstecken.

So schalten Sie die Taschenlampe ein

1. Schalten Sie die Powerbank ein indem Sie die Power-Taste betätigen.
2. Schalten Sie die Taschenlampe ein, indem Sie die Power-Taste erneut zwei Mal zügig hintereinander betätigen.
3. Schalten Sie die Taschenlampe aus, indem Sie die Power-Taste ein weiteres Mal zwei Mal zügig hintereinander betätigen.

Sicherheitshinweise

- Vor dem ersten Gebrauch die Powerbank einmal vollständig laden.
- Verwenden Sie das Gerät zum Laden ausschließlich mit dem mitgelieferten Kabel.
- Um die Haltbarkeit des Akkus bei unregelmäßigem Gebrauch zu gewährleisten, laden Sie das Gerät einmal alle drei Monate.
- Führen Sie den Ladevorgang nicht unbeaufsichtigt durch. Bei Kurzschluss oder mechanischer Beschädigung besteht Überhitzungs- und Brandgefahr.
- Tauchen Sie das Produkt niemals in Wasser oder andere Flüssigkeiten.
- Behandeln Sie das Produkt sorgfältig. Schläge, Erschütterungen oder Fallen aus bereits geringer Höhe können das Produkt beschädigen.
- Bei Austritt von Flüssigkeiten, verwenden Sie das Gerät auf keinen Fall weiter.
- Ein Umbau oder Verändern des Produktes beeinträchtigt die Produktsicherheit. Achtung Verletzungsgefahr!
- Öffnen Sie das Gerät niemals eigenmächtig. Führen Sie Reparaturen nie selbst aus!
- Bitte halten Sie das Gerät von Kindern fern.
- Technische Änderungen und Irrtümer vorbehalten.




Dieses Elektrogerät gehört nicht in den Hausmüll. Für die fachgerechte Entsorgung wenden Sie sich bitte an die öffentlichen Sammelstellen in Ihrer Gemeinde.

Für Schäden an angeschlossenen Geräten wird keine Haftung übernommen. Informieren Sie sich unbedingt vor dem Gebrauch beim Hersteller Ihres Gerätes über die Verwendbarkeit dieses Zubehörproduktes.

Hiermit erklärt die XLayer GmbH, dass sich das Gerät XLayer **Powerbank Wireless Discover 10.000 mAh** in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der erforderlichen Richtlinien befindet. Die entsprechende Konformitätserklärung kann unter service@xlayer.de angefordert werden.

User Guide


XLayer Powerbank Wireless Discover 10.000

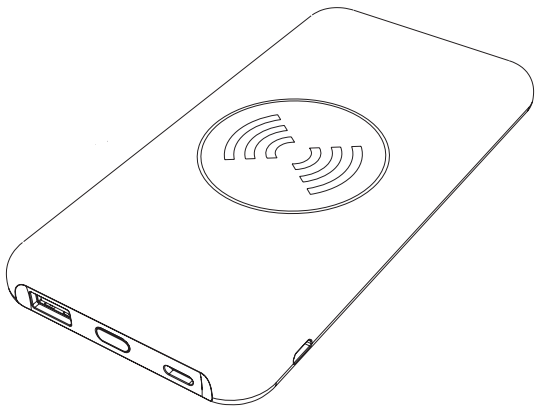

Thank you for purchasing the XLayer Powerbank Wireless Discover 10.000 mAh. This powerbank can be widely used for all kinds of electronic devices such as iPhone, iPad or other smartphones.

Contents

1 Powerbank, 1 USB to Micro-USB Cable, 1 User Guide

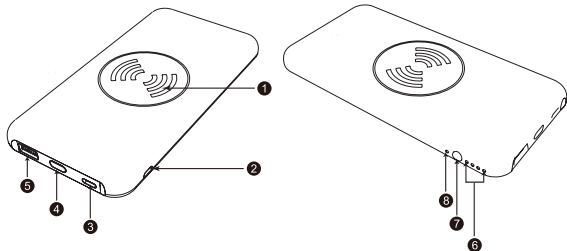

(1) Wireless charging output

(2) Micro-USB Input

(3) Lightning Input

(4) LED Flashlight

(5) USB Output

(6) LED indicator

(7) Power On/Off button

(8) Wireless indicator

LED Indicator

○ Powerbank battery is low,
○
○
● less than 25% remaining.

○ Powerbank battery is high,
●
● less than 75% remaining.

○ Powerbank battery is middle,
○
○
● less than 50% remaining.

● Powerbank battery is very high,
●
● more than 75% remaining.

Product Specification

Battery type:	Lithium Polymer
Capacity:	37 Wh (3.7V/10.000 mAh)
Micro-USB Input:	5V/2.0A
Type C Input:	5V/2.0A
USB Output:	5V/2.0A
Wireless Output:	5V/1.5A
Wireless charging distance:	0-8 mm
Power Display:	4 LED indicators show power level
Size:	155 x 79 x 14 mm
Weight:	234 g

Compatibility

The Powerbank is compatible with all inductive-enabled smartphones, tablets and other USB powered devices with 5V charging input.

The powerbank will automatically shut off a few seconds after finishing charging.

Cancel the connection from the mobile device after finishing charging.

How to charge the powerbank

We recommend that you fully charge the powerbank before each use. To charge your powerbank use one of the following two charging options:

1. Connect the powerbank with the supplied USB to Micro-USB cable or your Lightning cable to a PC USB port or AC power adapter.
When connected correctly, the powerbank will automatically start charging.
2. When charging, four LED indicators will show the corresponding capacity being charged. When fully charged, the indicators will all light up and stop blinking.
3. After finished charging please disconnect the USB cable from the powerbank.

How to charge other devices

Charging a inductive-enabled device on the powerbank

1. Put the wireless charging device in the middle of the wireless charging output of the powerbank.
2. When connected correctly, the device will automatically start charging and the wireless indicator will light blue.
3. After finished charging please disconnect the device by taking it from the powerbank.

Charging with a cable

1. Connect the powerbank and the device with the USB to Micro-USB cable.
2. When connectet correctly the device will automatically start charging and the LED indicators will turn on particular battery level.
3. After finished charging please disconnect the device and unplug the USB cable from the powerbank.

How to use the LED flashlight

1. Turn on the powerbank by pressing the power button.
2. Turn on the LED flashlight by pressing the power button twice.
3. Turn off the LED flashlight by pressing the power button again twice.

Safety Notice

- Fully charge the powerbank once before first use.
- Use the included cable to charge the powerbank.
- In order to ensure the durability of the battery during irregular use, charge the powerbank once every three months.
- Charging by unsupervised, short circuit or mechanical damage would cause overheating and fire.
- Do not immerse the product in water or other liquids.
- Handle the product carefully. shocks, vibrations or fall from a low height can damage the product.
- If liquid is leaking, stop using the device.
- A remodeling or modification of the product would affect the safety.
Risk of injury!
- Don't open the appliance without proper authorization and don't perform repairs yourself!
- Please keep the product away from children.
- Modifications and mistakes reserved.



This electrical device does not belong in the garbage. For proper disposal, please contact the public collection in your community.

Please note: we don't accept liability for any damages on connected devices. Please check compatibility of our product with the manufacturer of your device before use.

XLayer GmbH herewith explains that the device XLayer **Powerbank Wireless Discover 10.000 mAh** is in accordance with all relevant requirements and guidelines. The declaration of conformity can be requested under service@xlayer.de.